


LUMBER CANTILEVERED DETAIL FOR BALCONIES (NO WALL LOAD)

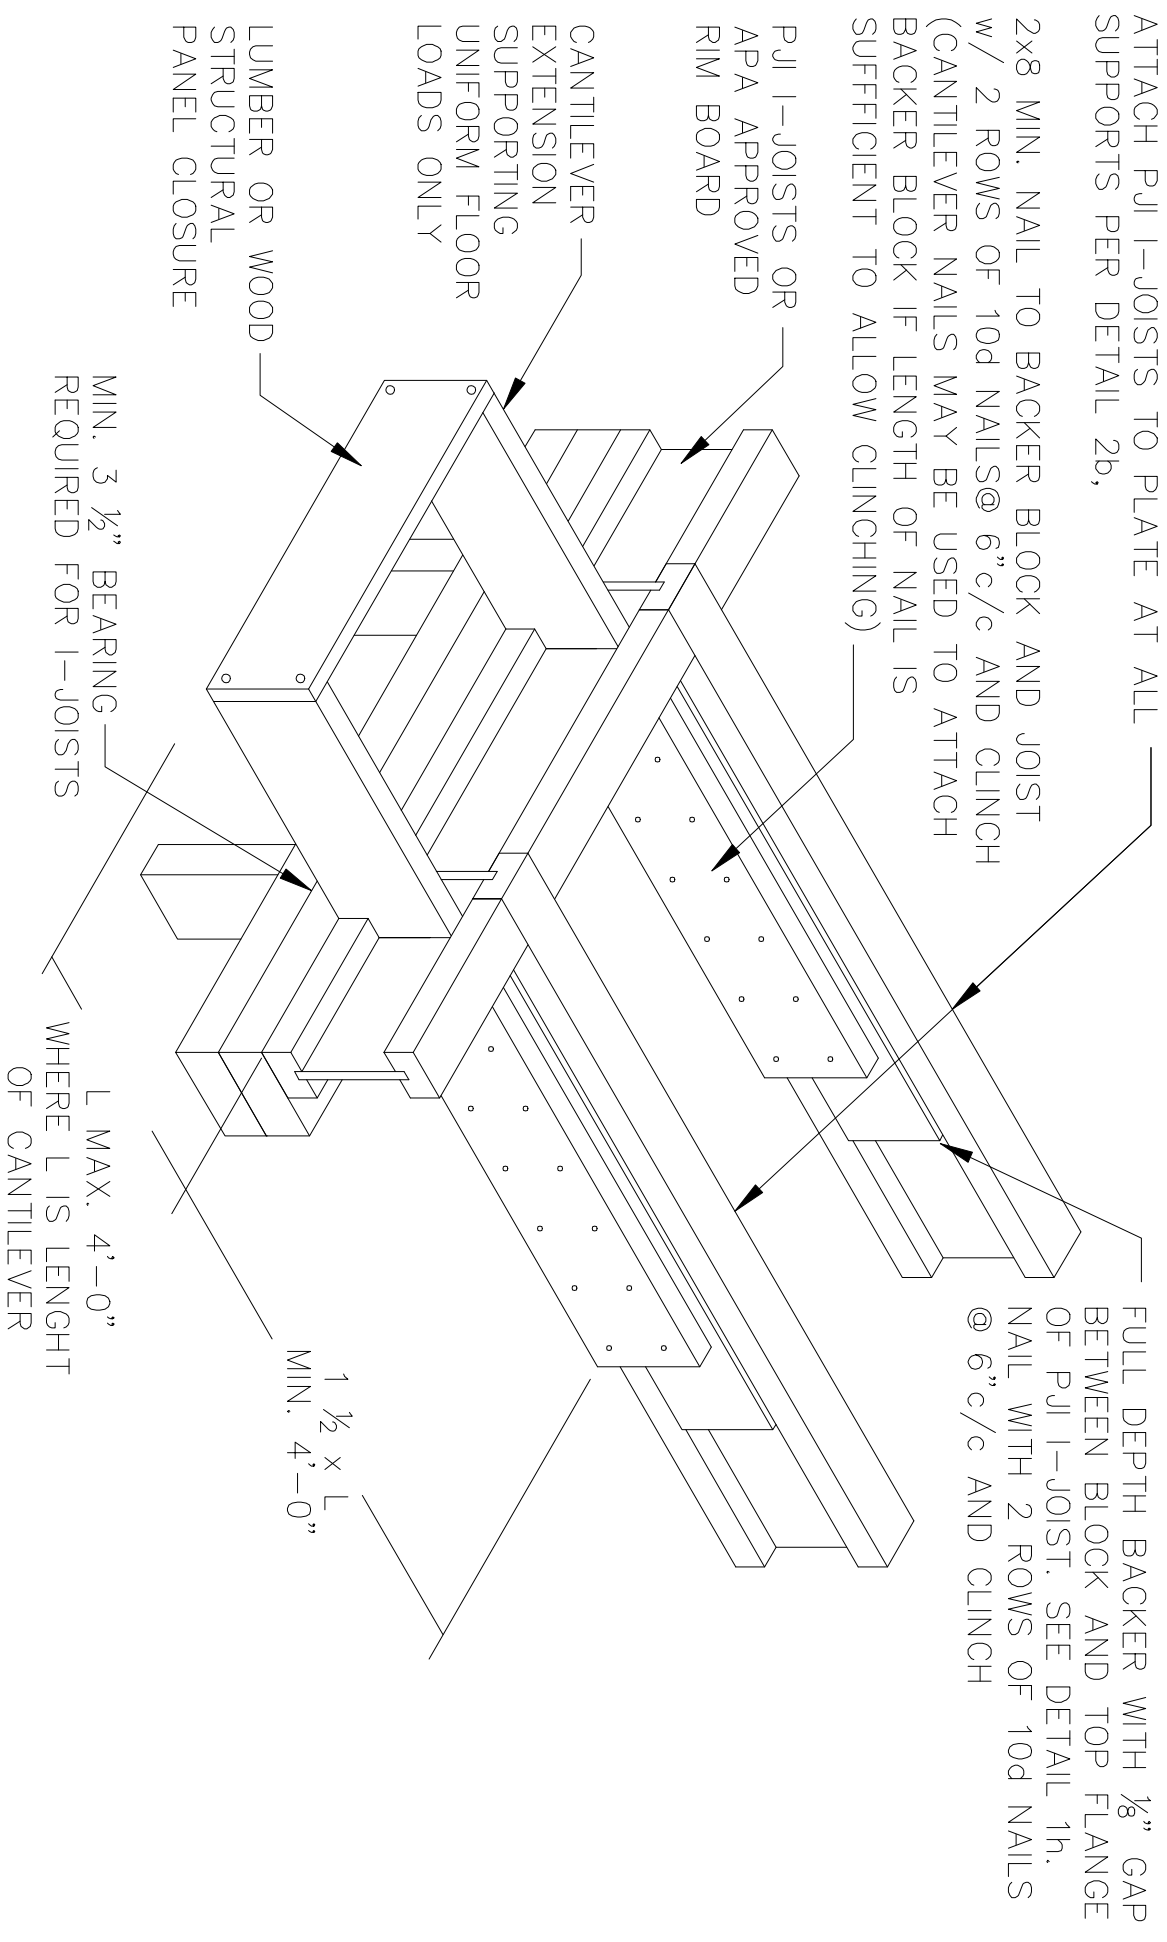

CAUTION:

CANTILEVERS FORMED THIS WAY MUST BE CAREFULLY DETAILED TO PREVENT MOISTURE INTRUSION INTO THE STRUCTURE AND POTENTIAL DECAY